

Connection of a room thermostat

The room thermostat must be connected to the terminal block situated next to the control panel.

When connecting any type of external control, the link M in Fig. 6.14 must be removed.

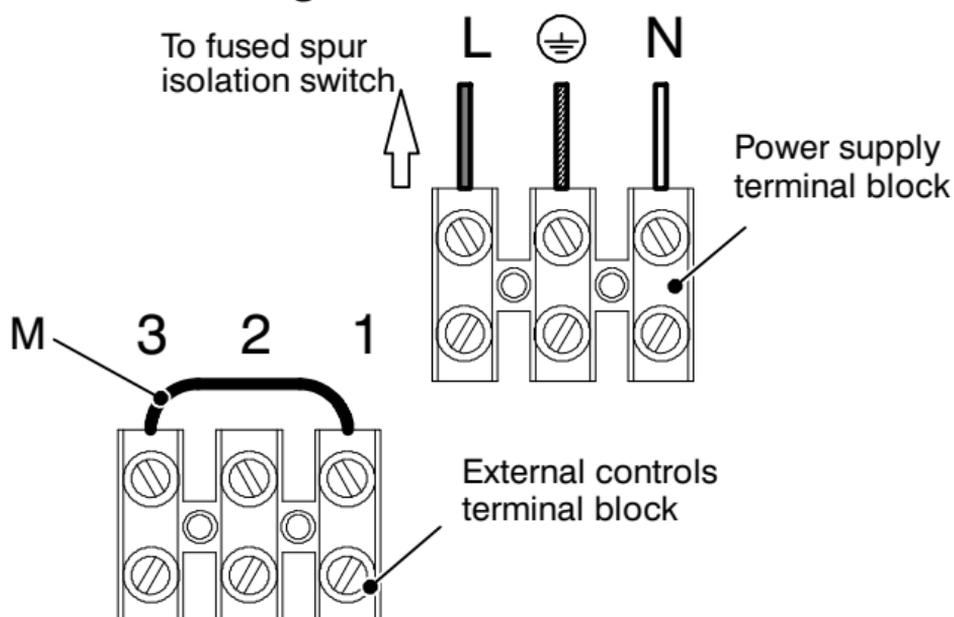


Fig. 6.14

8 Connect the room thermostat between terminals 1 and 3 as shown in Fig. 6.15.

Do not connect live wires to terminals to which the room thermostat must be connected.

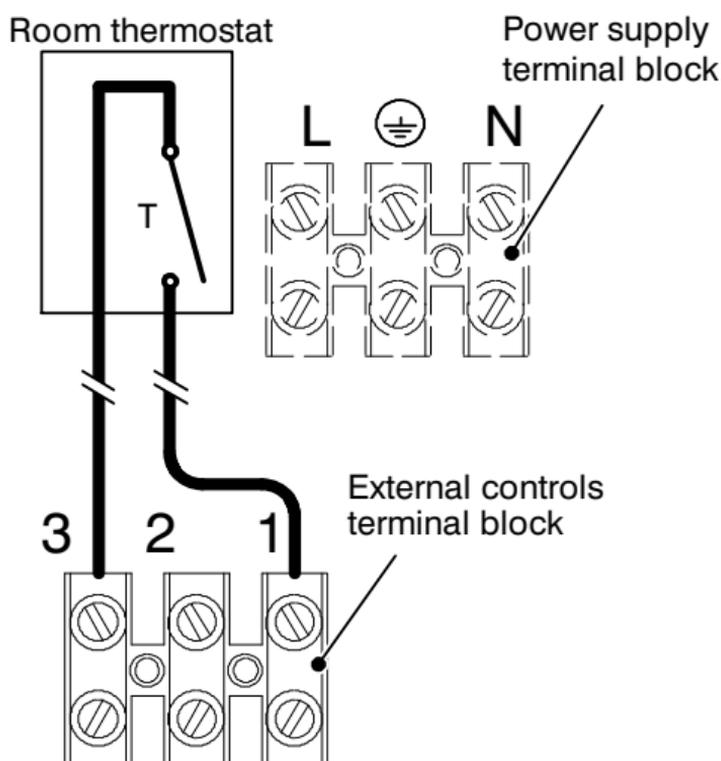


Fig. 6.15